


## 72-210 Removal and installation of door retainer

---


### Removal

---

- 1 Remove door liner (72-100).
- 2 Pull off plastic sheet along front area of inside door panel.
- 3 Remove lock on pin and pull out pin.

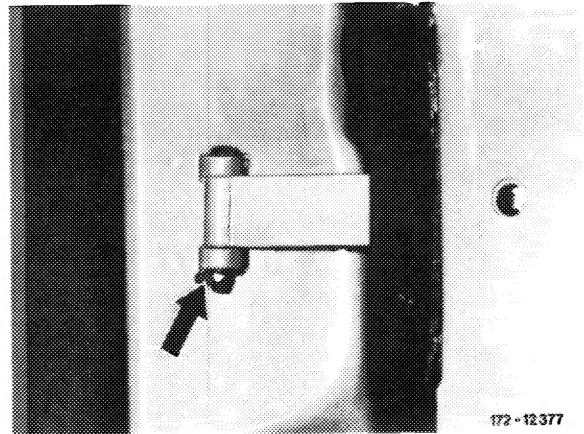

- 4 Unscrew both outer bolts and inner nut.
- 5 Remove door retainer.

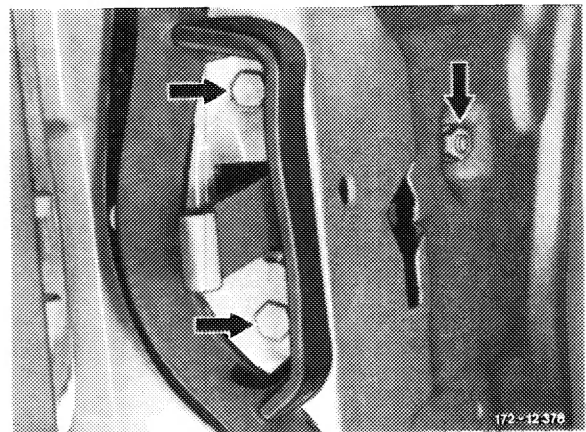

### Installation

---

- 6 Lubricate a new door retainer with SHELL-RETINAX G before installation.
- 7 Install in reverse sequence.